



sandlewood
501001



tan
501002



earth brown
501006



shale grey
501008



rusty grey
501009



mojave beige
501016

Pietra (5010)



A



B




C

Cubing/pallet: 96 lin. ft (29.2 lin. m)
Units: Average of 1 unit/lin. ft (3.28 units/lin. m)
Weight/pallet: 1320 lb (599 kg)
Texture: Split face and Aged
 32 units of each per pallet
 4 rows of 24 lin. ft (7.32 lin. m) per pallet

	Height in (mm)	Width in (mm)	Length in (mm)
A	2.95 (75)	4.5 (114)	8.85 (225)
B	2.95 (75)	4.5 (114)	11.8 (300)
C	2.95 (75)	4.5 (114)	14.75 (375)

INSTALLATION GUIDE

- The Pietra curbstone should always be installed on the same compacted foundation as a paver application.
- The compacted surface behind the Pietra curbstone should be 1-1/2 times the thickness of the excavation.
- Install your Pietra along the driveway and pour some concrete behind the curbstone to obtain an "L" shape.
- Install your sand on your driveway like you would normally do in the installation of pavers.
- Backfill the Pietra to add the final touch with your choice of earth, top soil, mulch or grass.

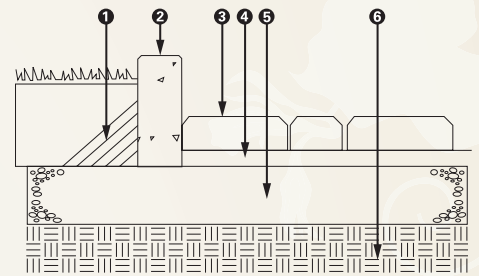

- 1 Poured concrete
- 2 Pietra curbstone
- 3 Paving stone
- 4 Bedding sand
- 5 Compacted foundation
- 6 Compacted subgrade